Manualslib.com - The Global Manuals Library

SHARP 24EE3K QUICK START MANUAL

Table of Contents

Online Manual
What is included in the box
Setting Up The Tv
First Time Installation
Technical Specification
Other ManualsLib Projects

SHARP

Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions which can be found online.

Model Numbers

24EE3K
24EE3KR
24EE3KW
24EE4K
24EE6K
24EE7K

Register your manufacturers guarantee online within 14 days of purchase at **www.registertoday.co.uk/sharp** and enter into a prize draw to...

Win a SHARP Soundbar

Terms and conditions apply. Online registration only.

Quick & easy guide for setting up your TV

What is included in the box
Using the remote control
Setting up the TV for the first time - including attaching the stand
Connecting other devices to the Television

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*
Telephone UK 0330 024 0803 or ROI 01443 3323
Online support at: www.umc-uk.co.uk
Email support at: service@umc-uk.co.uk

*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Hours are correct at time of this document being published.
Please note these hours are subject to change periodically.
Calls to the ROI number are charged at the local call rate.

The telephone opening hours are:

Monday to Friday:	8.30am – 6pm
Saturday:	9am – 5pm
Bank Holidays:	10am – 4pm

Closed Christmas and New Years day.

SHA/QSW/0258

Online Manual

To launch the Online Manual, press the ***[MENU]*** button and then select Settings **>** Setup **>** Help Information

What is included in the box

Accessories

Included with this TV are the following accessories

1 x Quick Start Guide
1 x Safety Leaflet
1 x Remote Control and 2 x AAA Batteries
1 x Stand installation pack

Additional Accessories

If you don't have the RF cable shown below, then you can purchase one from www.umc-uk.co.uk/cables
If you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.

RF Cable

Microsoft PlayReady™

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

FreeviewPlay

Freeview Play brings together live TV viewing with ''catch up'' TV services such as BBC iPlayer, ITV player, More4 and Demand 5. The Freeview Play Explore app features a carousel of genres to select from when searching for programmes, such as sport, comedy, dramas and soaps, etc. Content is made up from recommendations of the major broadcasters and offers an alternative means of searching.

Note that to use the full functionality of Freeview Play your set must be connected to the internet.

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.

REMOTE CONTROL

Key

For models with integrated DVD players.
For models with USB Playback.

1. **STANDBY** - Switch on the TV when in standby or vice versa.
   SOURCE - To display the input/source menu.

2. **NUMBER BUTTONS** - 0-9 to select a TV channel directly.
   MUTE - Mute the sound or vice versa
   GUIDE - Opens the 7 day TV guide (digital TV mode).

3. **MENU** - Displays the OSD menu.
   FAV - Displays the favourites menu.
   INFO - Press once for now/next channel information.
   - Press twice for information about the current programme.
   ▲/▼/◀/▶/**OK** - Allows you navigate the on-screen menus and adjust the system settings to your preference.
   BACK - To go back a previous step.
   APPS - Access the Apps menu.
   EXIT - To exit all menus.
   VOL (+/-) - Tilt to increase/decrease the sound level.
   CH (+/-) - Tilt to move up or down the channel being watched.

4. **NETFLIX** - Access the Netflix App.
   PRIME VIDEO - Access the Prime Video App.
   YOUTUBE - Acess the YouTube App.
   FREEVIEW PLAY - Access the Freeview Play App.
   AUDIO - Scrolls through the sound mode options
   SUB - To switch the dialogue at the bottom of the screen (on/off).
   TEXT - To enter/exit Teletext.
   TV - To switch to digital Channels
   - ⏯ To play/pause
   - ◀◀ To play in fast rewind mode
   - ▶▶ To play in fast forward mode
   - ■ To stop the playback

   COLOUR BUTTONS - Execute corresponding function at that time

Sky Remote Code

If you wish to use your Sky remote to operate the TV's basic functions, you will need a Sky remote control (Revision 9 or later) and you will need to program it with the code 2134. If you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

Setting up the TV set for the first time

1 Fitting the stand

For stand installation, there are two types of screws provided as shown below. To complete the stand installation you will require a cross head screw driver.

Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

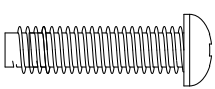

3 x M (4x12)

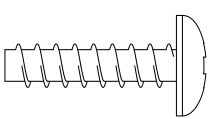

4 x ST (4x12)

Used for attaching the stand base to the stand neck (fig.3)

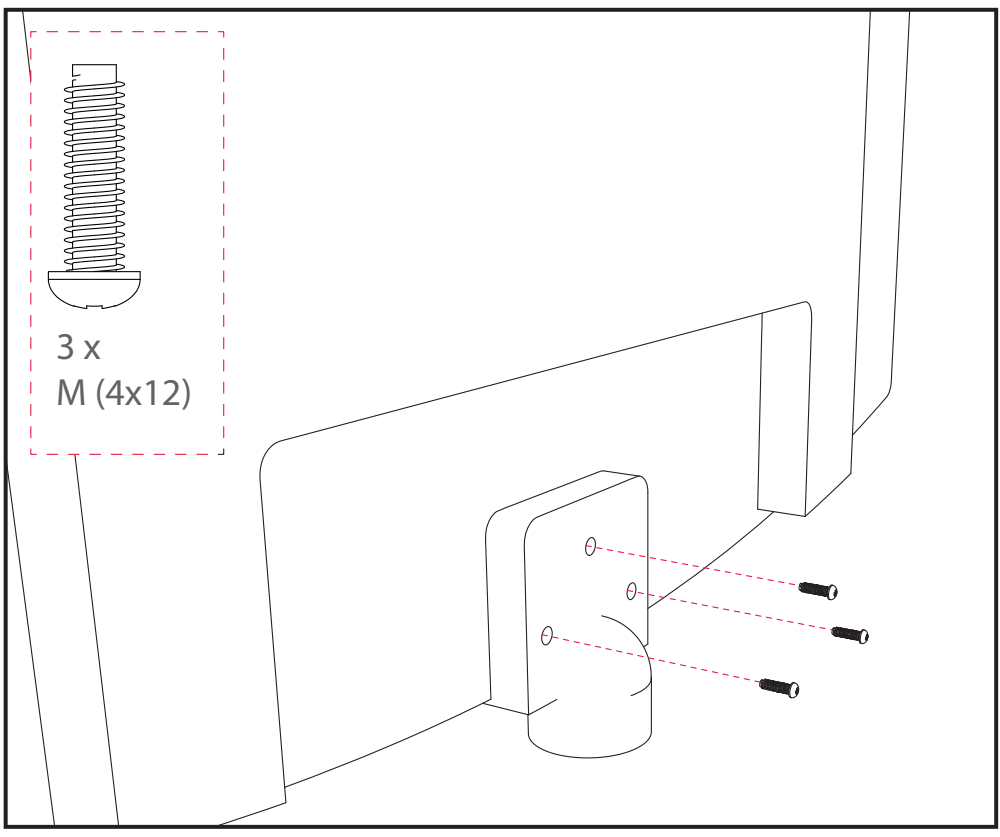

1

Attach the stand neck to the rear of the TV set using the 3 x M(4x12) screws

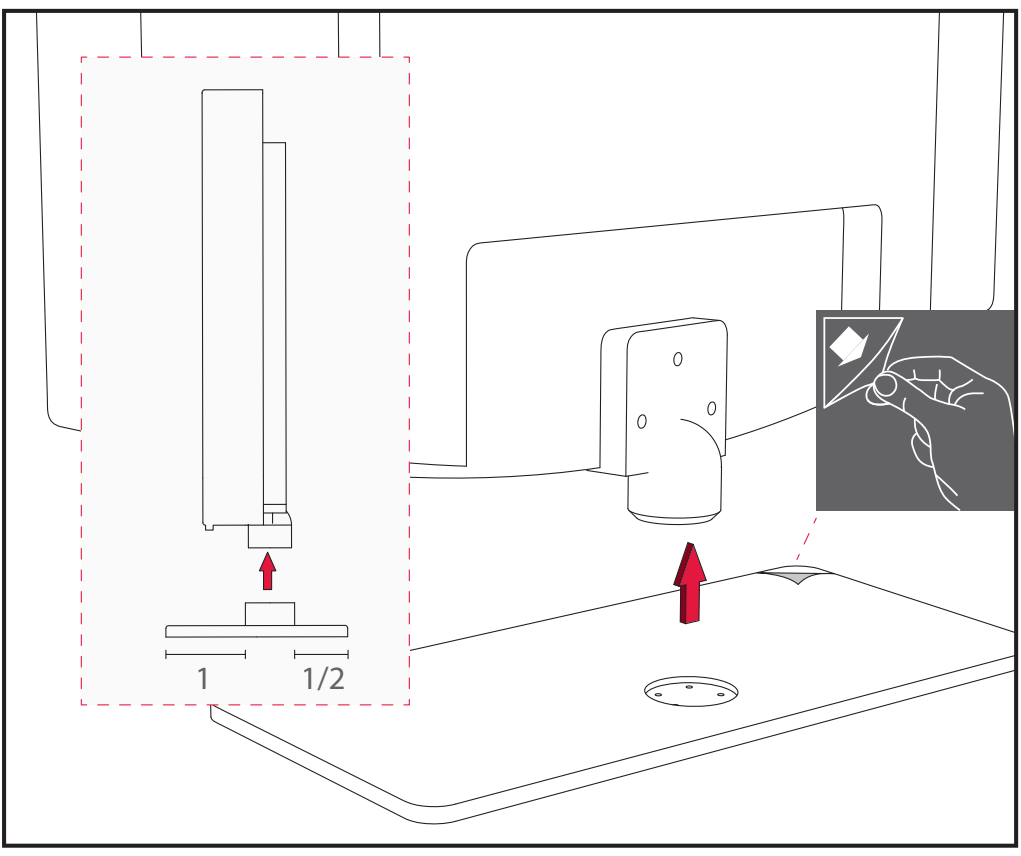

2

Peel off the protective plastic cover then attach the stand base to the neck.

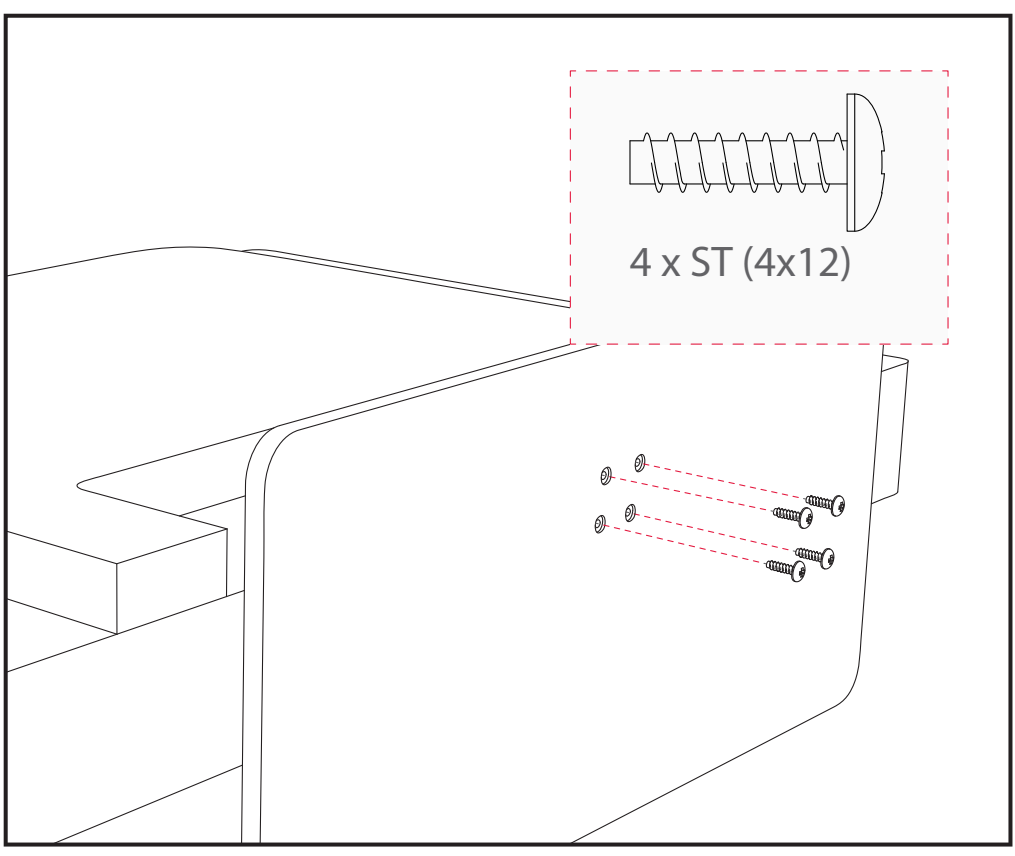

3

Secure the base to the neck by using the 4 x ST(4X12) screws provided.

HELPFUL ADVICE FOR FIRST TIME STAND INSTALLATION

When securing the self-tapping screw/s into the base of the stand (on first installation) the screw/s will be naturally tight as they create a thread in the plastic of the stand neck in order to support a TV of this size.

A. Ensure the cross head screw driver tip fits correctly into the head of the screw and that it is not too big or small.

B. Screw in all screws individually and partially before tightening all of the screws fully.

C. If they become very tight try loosening them slightly and then re-tightening them once again as this will continue the process of creating the thread for the screws.

2 Connecting your set

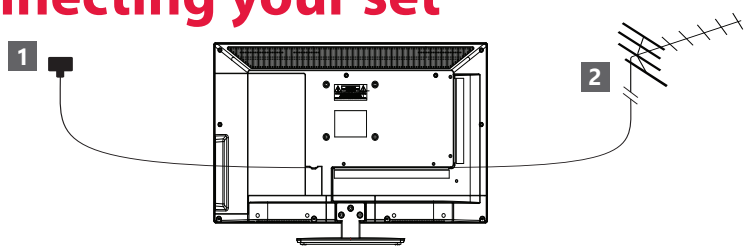

1 Connect the TV to your power socket.

2 If you wish to use the TV to receive Freeview/Saorview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saorview, skip this step.

3 Button layout

▶❚	1	Stop/Eject Disc	For DVD models only
⏏	2	Play/Pause Disc	For DVD models only
VOL+	3	Volume up and menu right	
VOL-	4	Volume down and menu left	
CH+	5	Programme/Channel up and menu up	
CH-	6	Programme/Channel down and menu down	
MENU	7	Displays Menu/OSD	
SOURCE	8	Displays the input source menu	
STANDBY	9	Standby Power On/Off	

Remote Control:
Installing Batteries

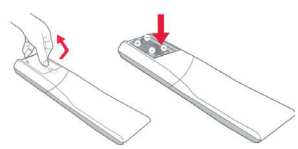

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

4 First time installation

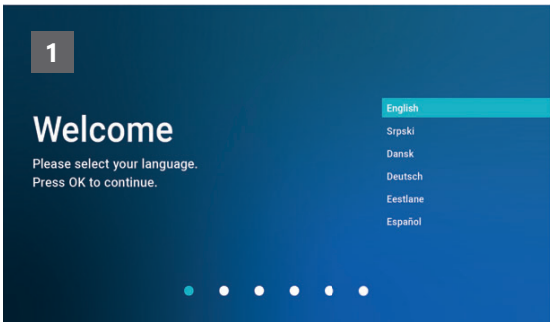

Introduction & Language

When the set first turns on, it enters the First Time Installation mode. This can be restarted by restoring the set to default settings in the 'About TV' Menu.
Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.

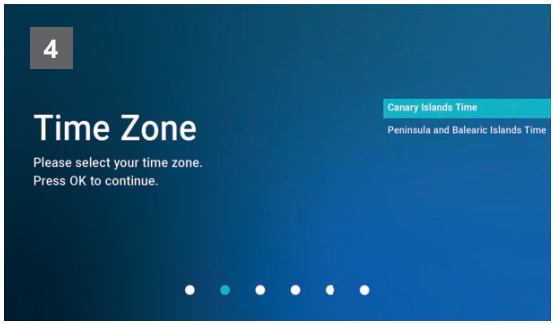

Time Zone

Set the Time Zone in which the TV will reside. This may be dependent on the country you select in step 2.

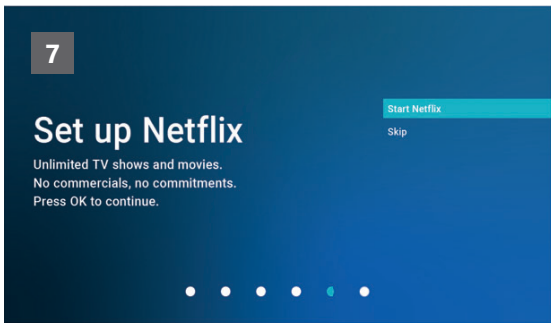

Set up Netflix

If you have a Netflix account, it can be set up on the television here. Once set up and validated, the First Time Installation returns to the next step.

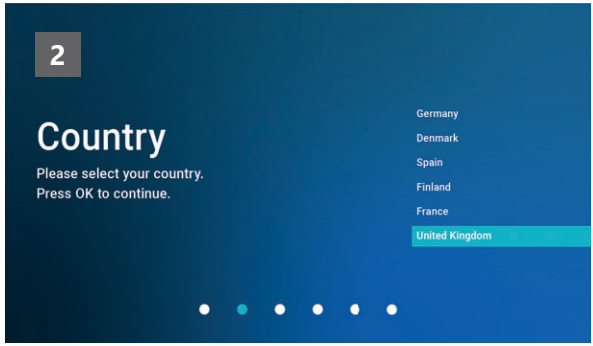

Country

Select the correct country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.

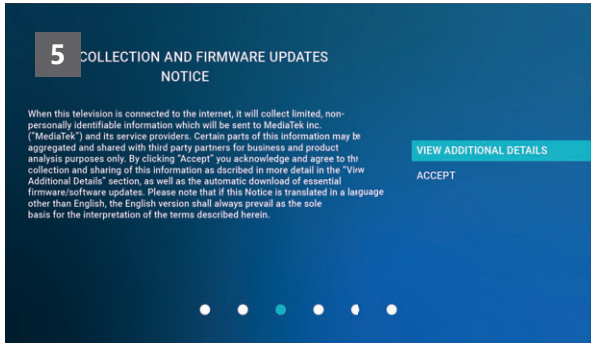
5
COLLECTION AND FIRMWARE UPDATES
NOTICE
When this television is connected to the internet, it will collect limited, non-personally identifiable information which will be sent to MediaTek inc. ("MediaTek") and its service providers. Certain parts of this information may be aggregated and shared with third party partners for business and product analysis purposes only. By clicking "Accept" you acknowledge and agree to the collection and sharing of this information as dscribed in more detail in the "View Additional Details" section, as well as the automatic download of essential firmware/software updates. Please note that if this Notice is translated in a language other than English, the English version shall always prevail as the sole basis for the interpretation of the terms described herein.
VIEW ADDITIONAL DETAILS
ACCEPT

Updates Notice

You will need to agree to certain information collection for the TV set to operate as intended.

Note: In home mode, the TV will switch off automatically after 4 hours in the event that no buttons are pressed on the TV or remote control.

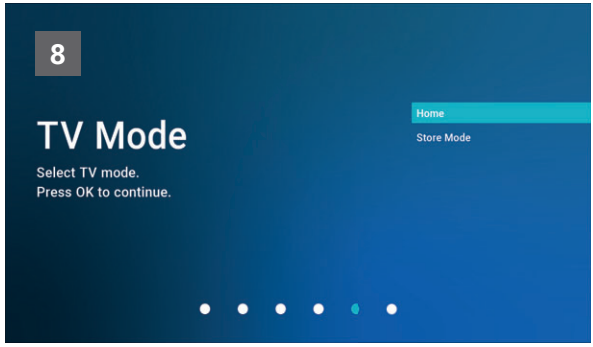

TV Mode

Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25%
(by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

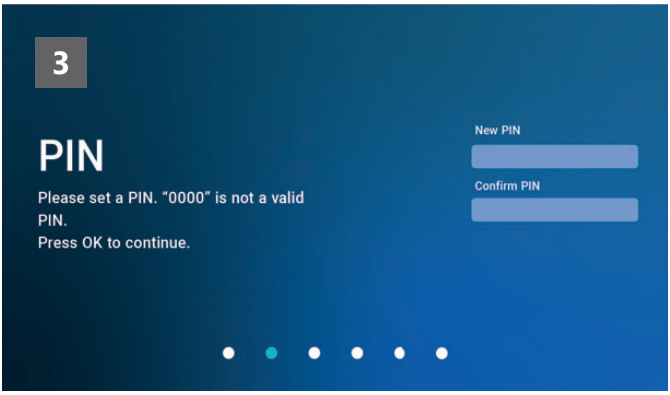

PIN

This needs to be set to establish parentol controls.

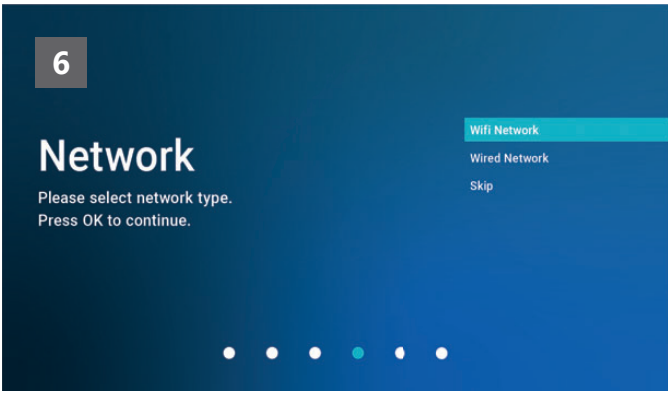

Network Set Up

You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable, the Wifi set up will be skipped.

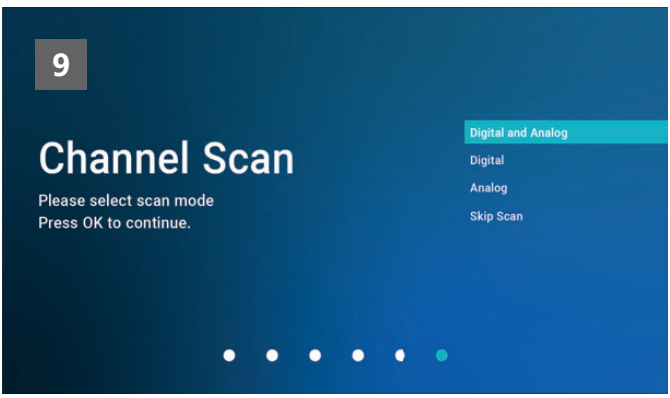

Channel Scan

Choose to install terrestrial channels via Digital or Analog signals.

Note: Analog signals in the United Kingdom have been turned off. Only Digital signals are available.

Win a SHARP Soundbar

Register your manufacturers guarantee online within 14 days of purchase at **www.registertoday.co.uk/sharp** and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply. Online registration only.

Wall Mounting the TV

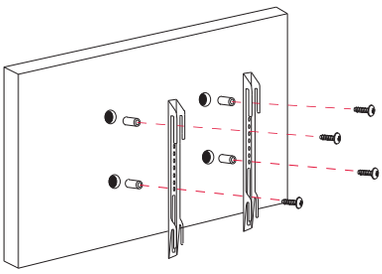

Image for illustration only.

For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

1. Remove the four screws that are supplied in the wall mounting holes.
2. The wall mount can now be easily attached to the mounting holes on the rear of the TV.
3. Install the wall mounting bracket to the television as advised by the bracket manufacturer.

The picture shows the use of spacers, which are not applicable to all sets/installations.

Connectivity

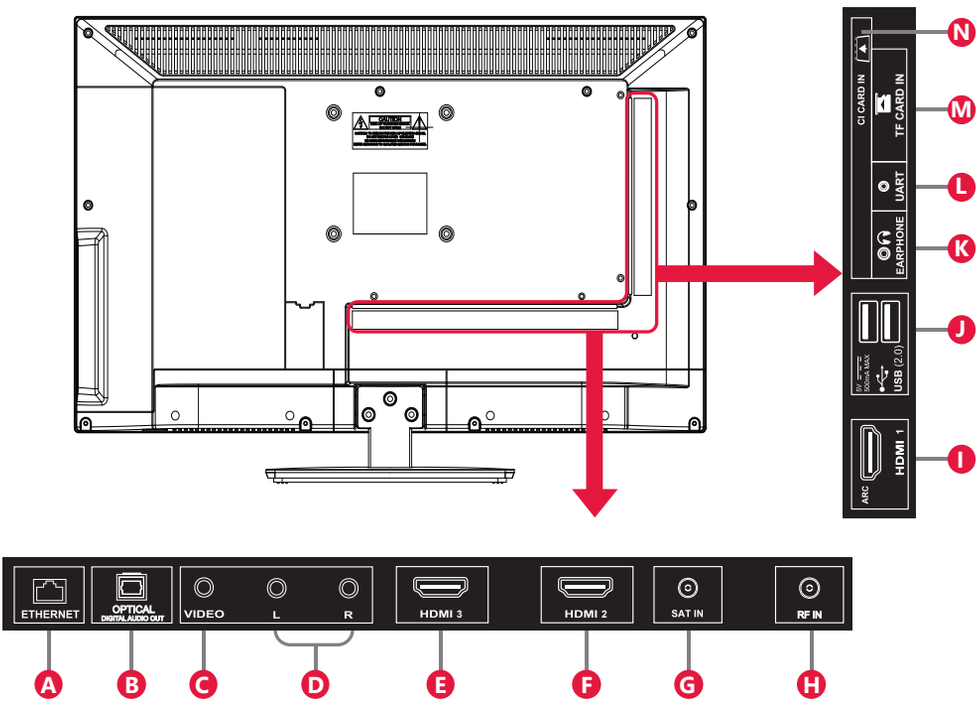

A	LAN*	Network Connection	H	RF In	RF / TV Aerial input
B	Digital audio	Digital optical audio output	I	HDMI 1 (ARC)	HDMI input with ARC
C	Video	Video input	J	USB 2.0	USB 2.0 input x2
D	L/R	Audio Shared for video	K	Earphones	Earphones Input
E	HDMI 3	HDMI input	L	Service Input	Input used by Service Centers
F	HDMI 2	HDMI input	M	TF Card In	Micro SD Card input
G	Sat In	Satellite Input	N	CI card in	Common interface module

SHA/QSW/0258

Technical Specification

	24EE3K 24EE3KR 24EE3KW 24EE4K 24EE6K 24EE7K
Energy Efficiency Class (SDR)	E
Power consumption (SDR)	17 W
Screen resolution (pixels)	1366 x 768
Screen Size (diagonal)	60 cm / 24 inches
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	3 x HDMI • 2 x USB • 1 x Micro SD card slot 1 x RJ45 LAN/Ethernet • 1 x Composite/CVBS Video 1 x L/R Audio input for Composite/CVBS
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker*/ Amplifier Watts (RMS)	2 x 5 / 2 x 3
Voltage and power consumption	AC 220V ~ 240V; 50Hz 17/40W (home mode/max) (<0.5W in Standby)
Dimensions including stand (mm)	560W x 385H x 140D
Net weight (Kgs)	3.8
Wall Mounting	VESA 100 x 100 (mm)

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS-HD Master Audio, DTS-HD, Virtual:X, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages